

<b>Banjo Bulkhead- Hole Sizing Chart</b>	
<b>Pipe Size</b>	<b>Hole Saw Size Needed</b>
1/2"	1-5/8"
3/4"	1-5/8"
1"	2-1/4"
1-1/4"	2-1/4"
1-1/2"	3"
2"	3"
3"	4-1/2"
4"	5-3/4"

### **Instructions**

- 1-Cut hole with holesaw to the size indicated.
- 2-Ensure that the hole is cut clean. Irregular holes could cause poor seating and possible leaks.
- 3-Insert the bulkhead with the Gasket on the inside of the tank and the nut on the outside
- 4-Tighten Nut by hand and then finish with a pipe wrench