


T-1 Plumbing Kit



What's Included

T-1 Plumbing Parts

- A. Timer (1)
- B. Stand Pipe Parts
- C. Screen Intake (2)
- D. Bulkhead (2)
- E. Media Guard (1)
- F. Vinyl Tubing (6 ft)
- G. Pump (Purchased Separately)
- H. Zip Ties (2)
- I. Barbed Elbows (2)
- J. Barbed Tee (1)
- K. Barbed Valve (2)

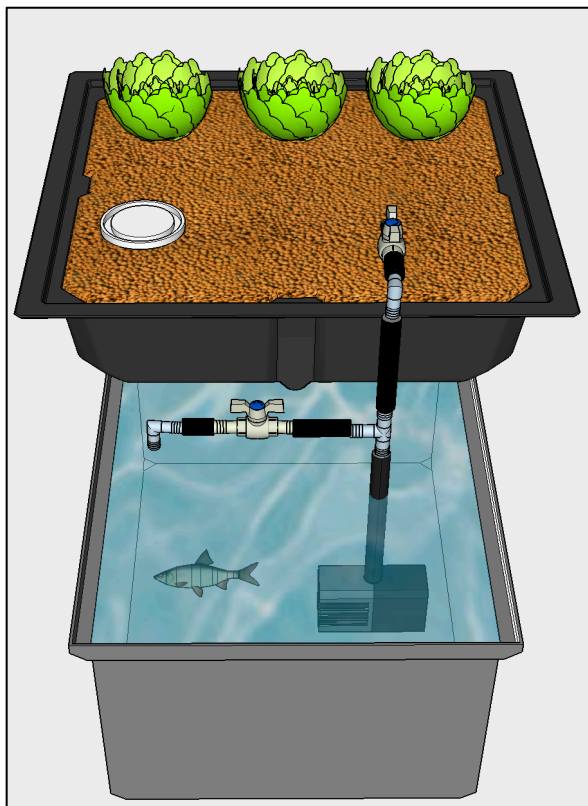

What's not included

Fish tank & grow bed are not included in this kit. Make sure to choose an appropriate size for your available space and growing needs. Shown here is the Easy Reach Aquabundance fish tank & grow bed. For more information on these systems & available parts, please visit our website www.Aquaponicsource.com for all of your growing needs!

1-855-285-4252

customerservice@theaquaponicsource.com

Flood and Drain Fittings Kit Assembly Instructions

Your flood and drain fittings kit has either been included with your AquaBundance Sleek or SpaceSaver Grow bed, or with the Flood and Drain Fittings Kit.

1. Select a Bulkhead Insert (*make sure there's a gasket in place on the Insert*), and place the Insert in either of the two holes in the Grow Bed.

NOTE: *The gasket will rest on the Grow Bed floor.*

2. Firmly screw on a Bulkhead Nut from the underside of the Grow Bed. The nut should be hand tight. If necessary, you can tighten later – when you test for leaks.
3. Repeat steps 1 & 2 for the other Grow Bed hole. Each hole should now have a Bulkhead Insert in it.
4. Screw together the 7 extensions to create the overflow pipe.
5. Screw the Overflow Pipe into the top side of the Bulkhead fitting.
6. Screw one of the Filters into the top of the Overflow Pipe.
7. Screw the second Filter into the top side of the other Bulkhead Insert. (*This is the "Water In" Bulkhead Insert.*)

Place the Media Blocker over the Filters.

